



# LAPTOP POWER BANK

RC-P72000-01

➤ Manual


## Specifications

- Capacity: 266Wh/22.2Ah@12V/72000mAh@3.7V
- AC adaptor input: 100-240V
- Input: 15V/2Amax
- USB Output: DC 5V/2.1A DC 5V/2.4A
- Cigarette lighter output: 12V 15Amax
- Laptop power supply output: 12V/4A, 16V/4A, 19V/3.5A, 21V/3.2A
- Size: 8.7\*5\*1.8 inch

## Contents

- Power bank
- AC adaptor
- Manual
- Laptop power cable
- Laptop power cable adaptor

## Functions

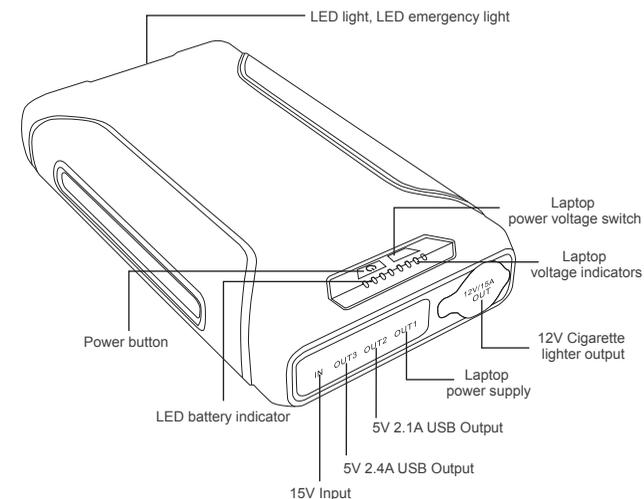

### CHARGING POWER BANK

Use the AC adaptor contained in the package to connect the power bank and AC source.

Please only use the AC adaptor contained in the package. Using a third party adaptor is not recommended and will void warranty coverage.

## LED BATTERY INDICATOR DISPLAY

From left to right:

- First light blinking: less than 25%
- Second light blinking: 25%~50%
- Third light blinking: 50%~75%
- Fourth light blinking: 75%~99%
- Fully charged when no lights blinking

## CIGARETTE LIGHTER

Use cigarette lighter port to power devices under 150W: Car Refrigerator, Tire Inflator Pump, Outdoor Camping Light, Fishing Light.

## USB PORTS

Compatible with 5V USB powered devices: Mobile phone, Tablet, Digital Camera and other 5V USB powered devices.

## LAPTOP POWER SOURCE

- **IMPORTANT**, please check the voltage requirement of the laptop.
- Choose the power cable adaptor compatible with the laptop.
- Press the power button once to turn on the power bank and use the voltage switch to select the desired voltage.
- Use the power cable to connect power bank and laptop.

## LED LIGHT

- Press power button once to turn on the LED battery indicator.
- Double tap quickly to turn on the LED light when the indicator is on. Double tap quickly to turn off.
- Press power button for three seconds to turn on the emergency LED light. Press for three seconds to turn off.

The power bank has built in over wattage protection. It will activate when the output power is more than 150W. To recover from the protection mode, unplug all connected devices and use the AC adaptor to charge the power bank.

## Regular Maintenance

- To prevent the power bank from capacity decreasing, please unplug the AC adaptor after fully charged.
- Keep the product away from extreme heat or cold, as well as any flammable materials or damp places.
- Run a full charge/discharge cycle every four months to prevent decreasing battery lifespan.
- When not using the power bank it is recommended to store it at 50% battery capacity.
- Avoid charging and discharging at the same time. It could damage the battery and decrease lifespan.
- Using power bank below 32°F or above 104°F is not recommended. Might cause irreversible damage to the battery.

## FAQ

### ■ Can I use four output ports at the same time?

No, using the laptop power supply and cigarette lighter simultaneously is not recommended. USB ports can be used with laptop power supply or cigarette lighter at the same time.

### ■ The power bank is not charging?

Check the connection between power bank, AC adaptor and AC source. The AC source needs to be 100-240V.

### ■ The power bank can not charge other devices?

Check the connection between power bank, cable and devices. Make sure the voltage and current output meet the devices requirement.

## Warranty

12 months comprehensive warranty after the date of purchase.

